





Berridge  
Manufacturing  
Company

## Berridge Manufacturing Spanish Tile installation

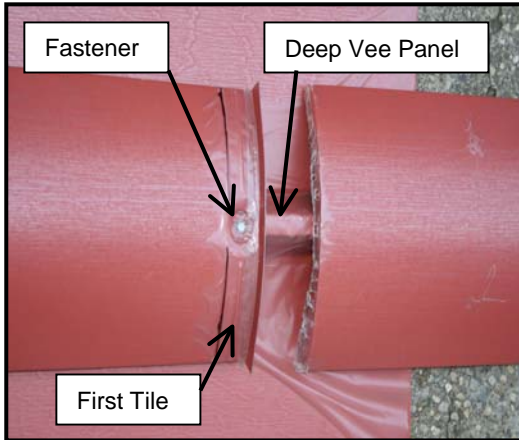

Step one; Install first tile at eave and fasten to rib of Deep Vee panel

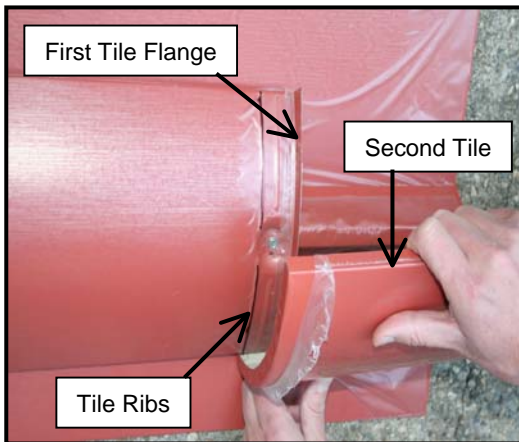

Step two; Elevate second tile over first and engage one side on to flange of first tile, keep end of tile below tile ribs.

Remember to remove strippable plastic film from Deep Vee panel and Spanish Tile prior to installation

January 25, 2006



Step three; Keeping palm of one hand as shown and lower other side of tile



Step Four; With second hand push down to engage this tile on to the first tiles flange, some force will be required to POP this tile into place



Tile installed properly will fit tight on to lower tiles, do not trim off edges of tile flange.