


The Berridge classic shingle provides a 9"x12" exposure. Care is required when installing this roofing product; shingles may require field adjustment to maintain straight rows and the shingle pattern.



1. Strike chalk lines along the roof deck.

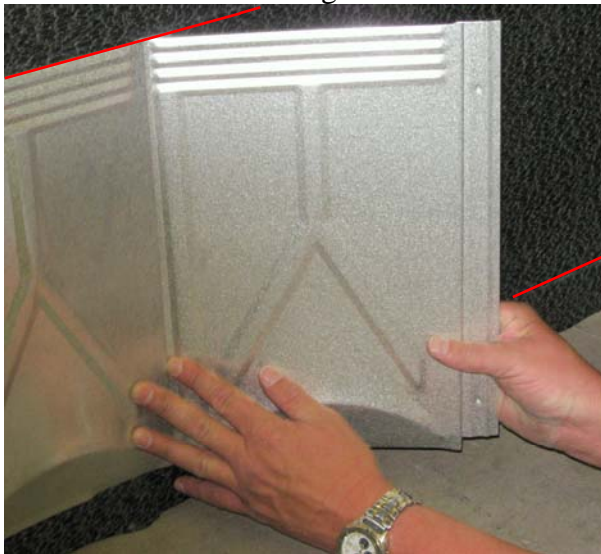


2. Start installation at the lower left corner of the roof insert the male side of the shingle into the female "S" of the shingle.




3. Keep top of shingle aligned with chalk line.



4. It may be required to field adjust the lower left of the shingle's male side in the female "S" to keep the top of the shingle aligned with the chalk line note a minimum of 75% of the shingle should be engaged.

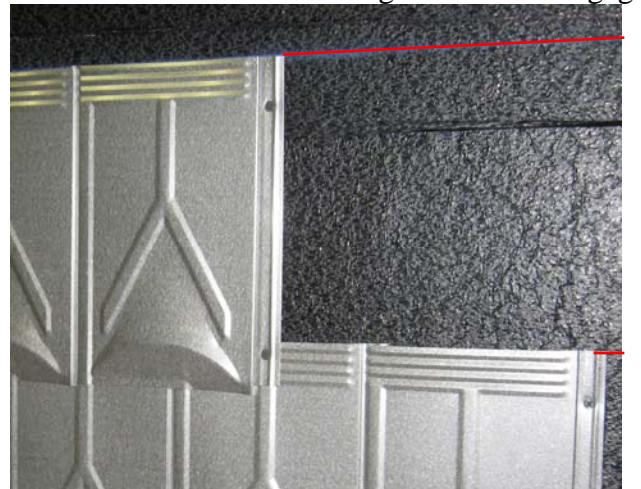

5. Align continuing rows of shingles to chalk lines adjusting each shingle to maintain a straight row.

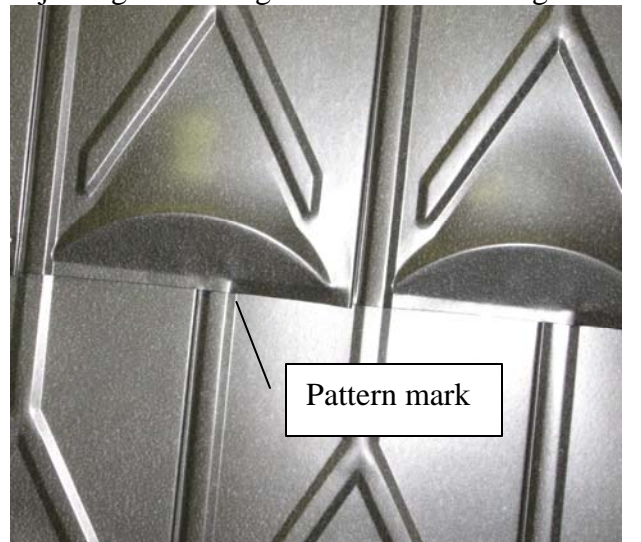

6. Pattern of shingles can be maintained by adjusting shingles, keeping the top of the shingle aligned with the chalk lines and maintaining position of pattern mark.