


# Berridge S-Tile Load Chart

## PLYWOOD

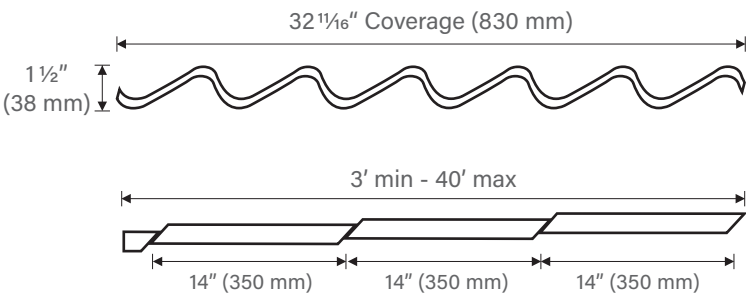


19/32" Plywood <sup>4</sup>							
(Galvalume Substrate )							
Gauge of Panel	Detail	Spacing (in)	Panel Fastener	Sidelap Fastener	Fastener Quantity	Allowable (psf)	Ultimate (psf)
24	A	14	#9-15 HWH	#12-14 HWH	1	84.25	168.5
24	B	14	#14-10 HWH	1/4"-14 HWH	1	134.75	269.50
24	C	14	#14-10 HWH	1/4"-14 HWH	1	206.00	412.00

NOTES:


- 1) All test results determined through UL580 testing standards.
- 2) **All** fasteners to be longlife fasteners with neoprene washers.
- 3) Stitch fasten panels together @ 14" on center.
- 4) Detail "A" can be installed over 15/32" or 19/32" plywood.

### Detail A

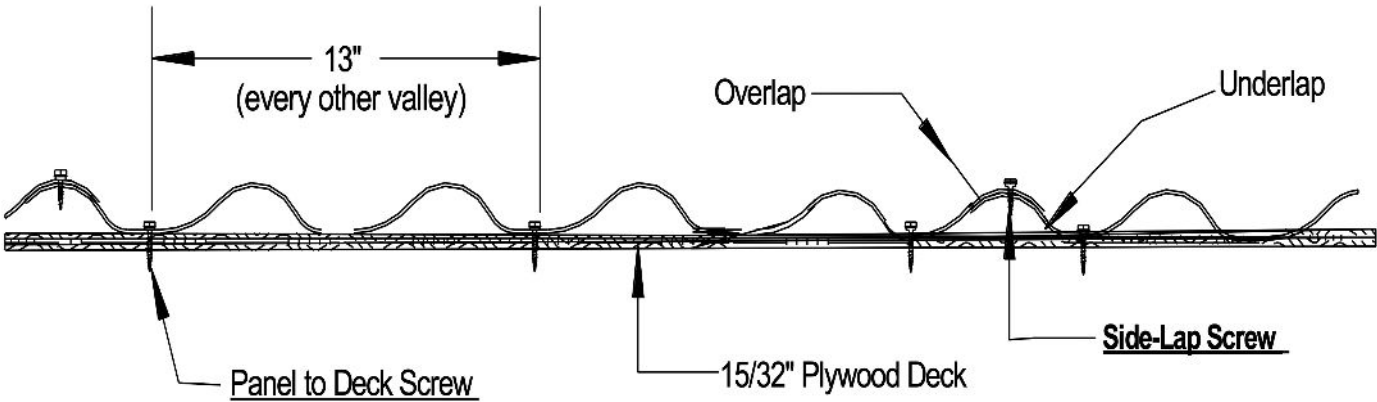


**CORPORATE HEADQUARTERS**  
2610 Harry Wurzbach Road  
San Antonio, TX 78209  
(800) 669-0009  
www.Berridge.com

## Detail B

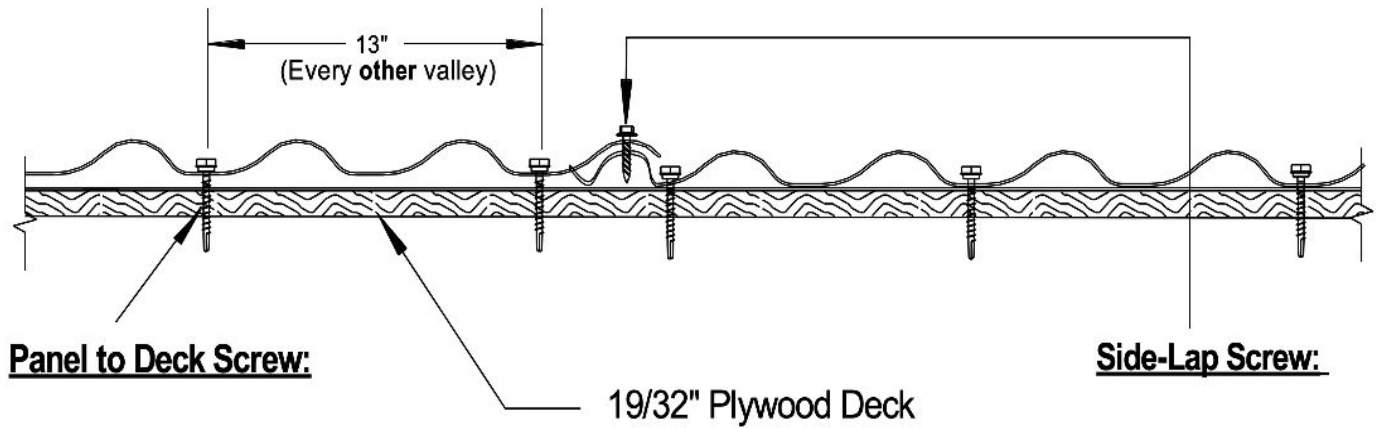

## Detail C

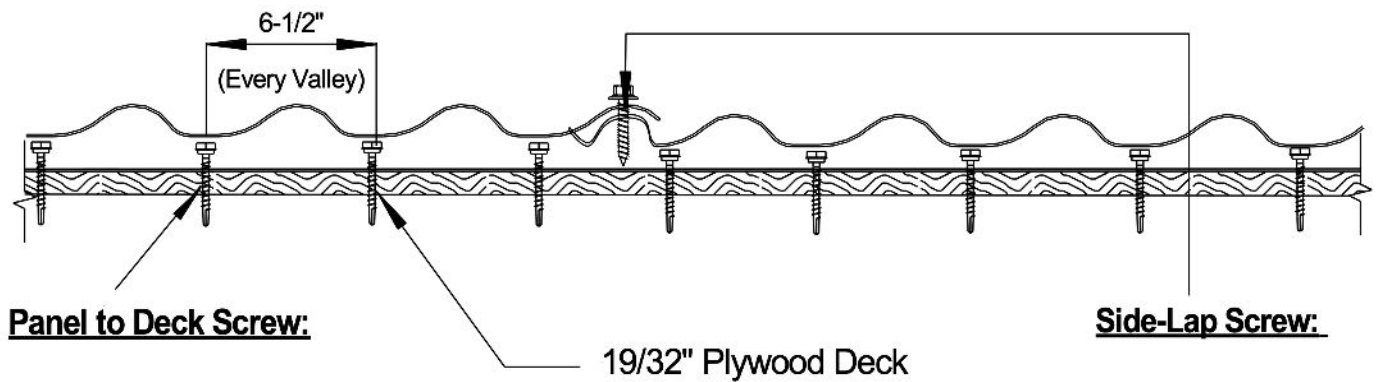

**CORPORATE HEADQUARTERS**  
2610 Harry Wurzbach Road  
San Antonio, TX 78209  
(800) 669-0009  
[www.Berridge.com](http://www.Berridge.com)