


Berridge S-Tile Load Chart

PLYWOOD

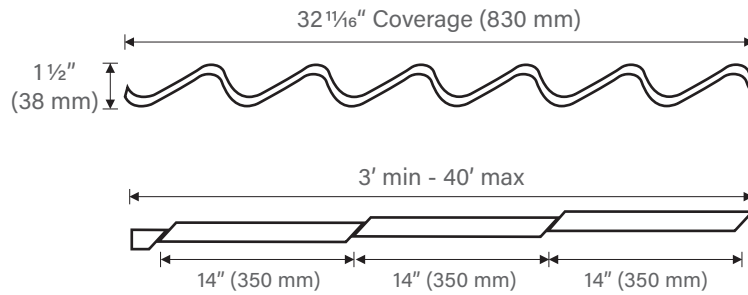


19/32" Plywood ⁴ (Galvalume Substrate)							
Gauge of Panel	Detail	Spacing (in)	Panel Fastener	Sidelap Fastener	Fastener Quantity	Allowable (psf)	Ultimate (psf)
24	A	14	#9-15 HWH	#12-14 HWH	1	84.25	168.5
24	B	14	#14-10 HWH	1/4"-14 HWH	1	134.75	269.50
24	C	14	#14-10 HWH	1/4"-14 HWH	1	206.00	412.00

NOTES:

- 1) All test results determined through UL580 testing standards.
- 2) **All** fasteners to be longlife fasteners with neoprene washers.
- 3) Stitch fasten panels together @ 14" on center.
- 4) Detail "A" can be installed over 15/32" or 19/32" plywood.

Detail A

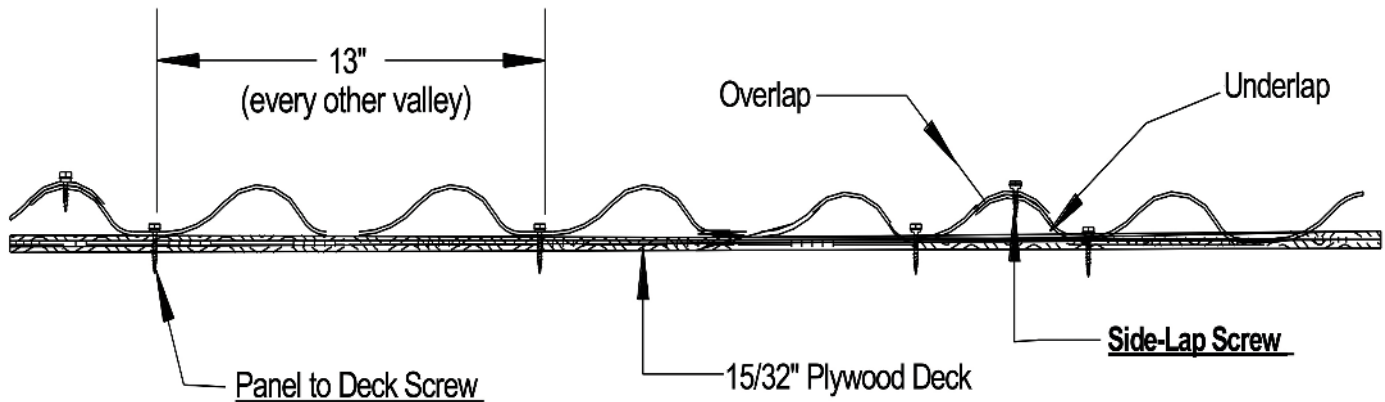


CORPORATE HEADQUARTERS

2610 Harry Wurzbach Road
 San Antonio, TX 78209
 (800) 669-0009
 www.Berridge.com


All information subject to change without notice. See website for details, specifications and Watertightness Warranty requirements.

© Berridge Manufacturing Company 2019 • 800-669-0009 • www.berridge.com

Detail B

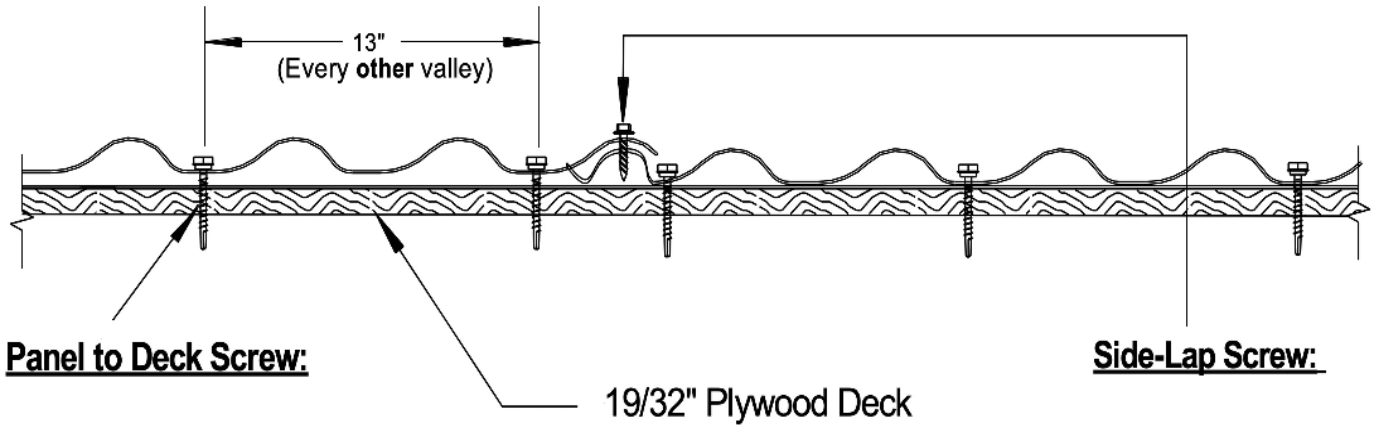

Detail C

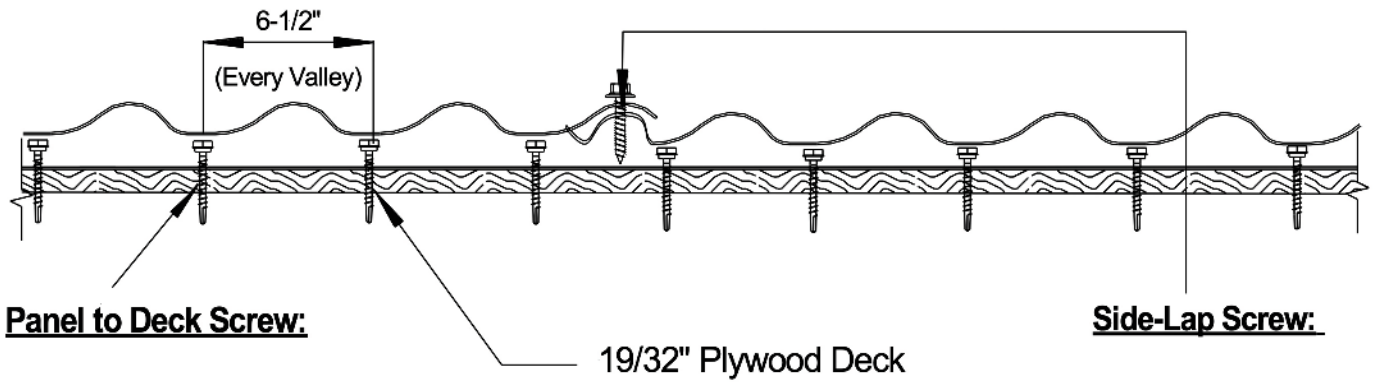

CORPORATE HEADQUARTERS
2610 Harry Wurzbach Road
San Antonio, TX 78209
(800) 669-0009
www.Berridge.com